

Pn# - (S)FRB6501/(S)FRB6502


1965-66 Ford Truck 2WD Shortbed & Longbed
Brake Line Set

65-66 Ford Truck

Inline tube

#1 Choice in Brake Plumbing Products

TECH SUPPORT 800 385 9452

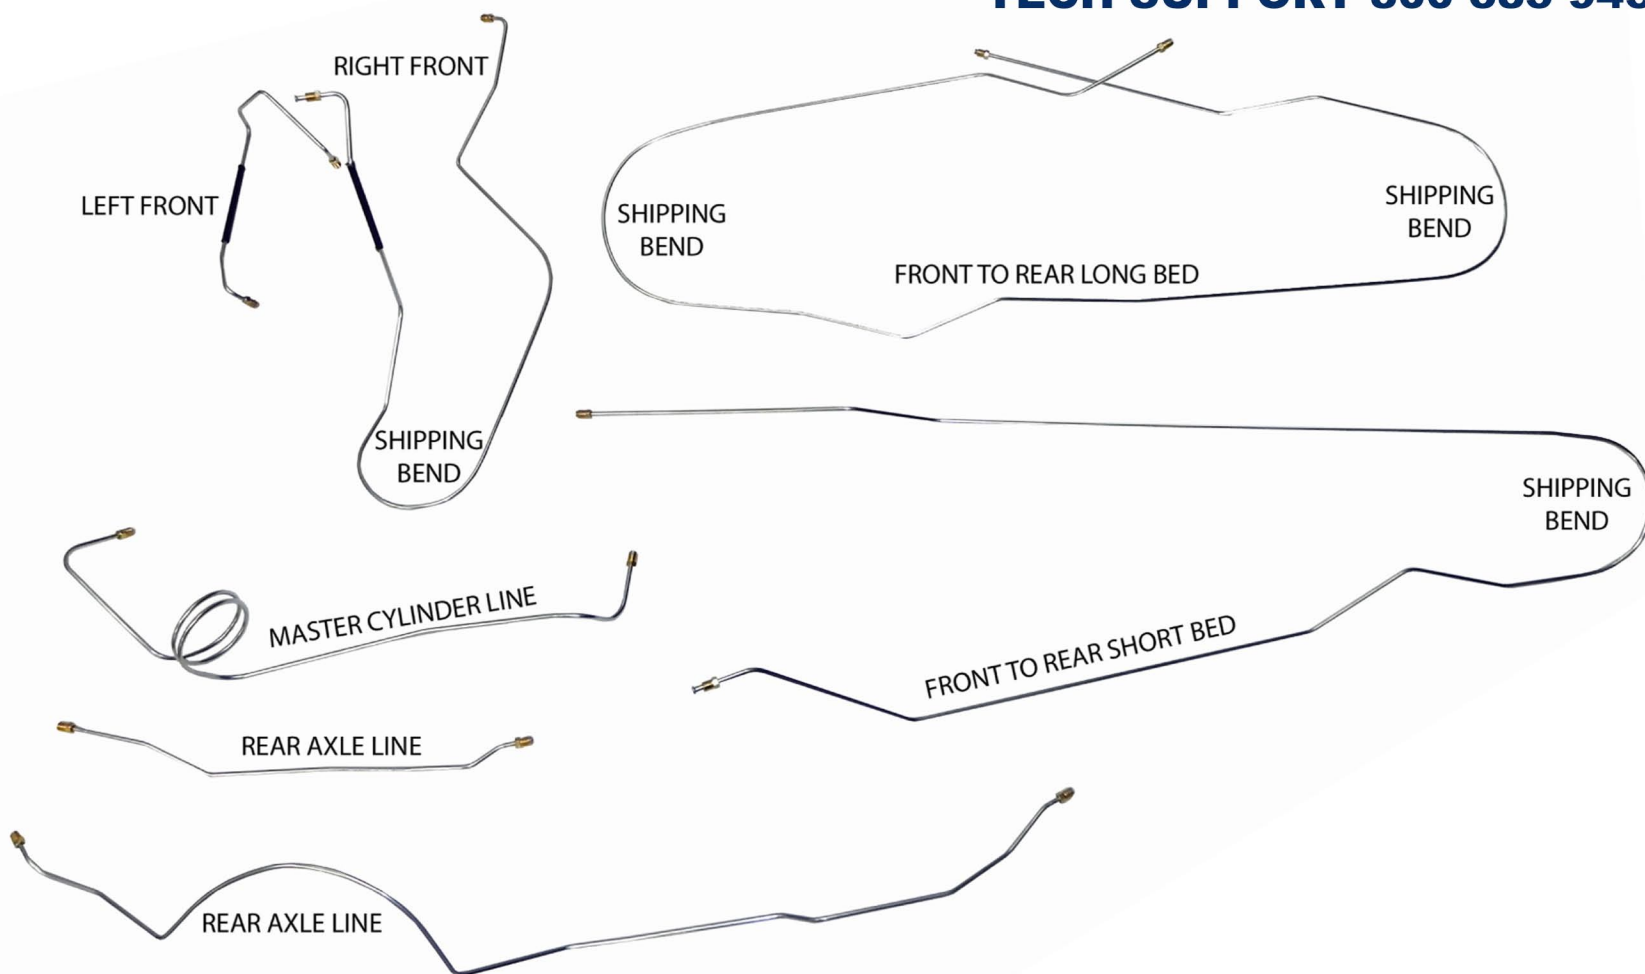

This kit was designed for an easier, hassle free installation.
Installation on your vehicle may not require all of the peices prodvided in this kit.
Once installed simply discard all unused pieces.