

Pn# - SPLB68D1 / PLB68D1- 8pc Line Set.
 Pn# - SOCB68D1 / OCB68D1- 8pc Line Set.
 Pn# - SBKB68D1 / BKB68D1- 8pc Line Set.

1968 Pontiac Lemans / GTO

1968 Oldsmobile Cutlass / 442

1968 Buick Skylark / GS

Conversion Power Disc

Hardtop.

Inline tube

The Professional Restorers #1 Choice


Tech Support 586 532 1338

This kit works with most all conversions on the market, it mounts the brass 5 port valve under the master cylinder on a bracket.



This is the direction of the valve mounting

BRK03

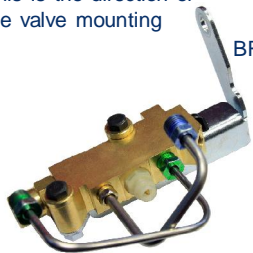

Master Cylinder to Prop Valve Mounted Under the MC, These come in the conversion kit.



This is a disc brake conversion line set for cars that have been converted to disc brakes. It is designed to hold the valve under the master cylinder away from the frame and exhaust manifold heat and clearance. If you do not have the correct valve bracket it is part number BRK03.